


Installation Instructions

EzRelease™

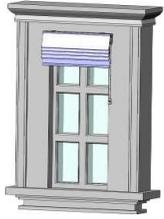

Getting Started


- Please take a moment to review the following installation guide.
- Please leave shade in folded open position for ease of installation
- Be sure to keep all components and packaging until shade is fully installed

Recommended Tools

- Power drill and Drill bit
- Tape Measure
- Screwdriver
- Level
- Pencil



You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	1 1/2" Screw (Provide) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provide) 


Hardware Included

Name	Picture
Outside Mount Male Bracket	
Inside Mount Male Bracket	
1 1/2" Screw	
2 1/2" Screw for bracket with spacer block	
1 7/8" (48mm) Screw for tension device	
Spacer Block	


1. To mark the brackets

Step 1: Position the shade inside or outside (depending on the version) the window opening. Make a mark along the end of the headrail on both sides on the mounting surfaces.

Step 2: Mark the positions where you will install the brackets, 3.5" in from each side of the shade.

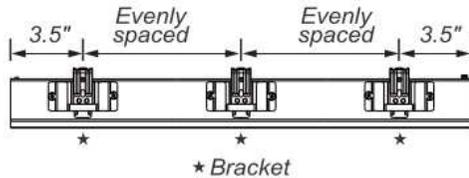

**** Proper alignment of brackets will make installation easier.**

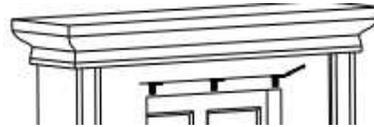


2. To mount the shade inside a window frame

- When flush inside mount, allocate a min. distance of 1 3/8" from the edge of the wall to the center of the screw hole. Use one 1 1/2" Screw to secure brackets.




3. To mount the shade outside a window frame

Allocate a minimum distance of 2" from the end of brackets to the top window frame.

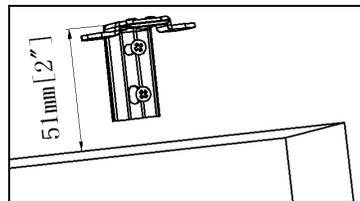

The combination of bracket and one spacer block

need to be used. Please follow the below illustration to attach the space blocks, and then mount the combination of the bracket and spacer block with 2pcs 2.5" screws.

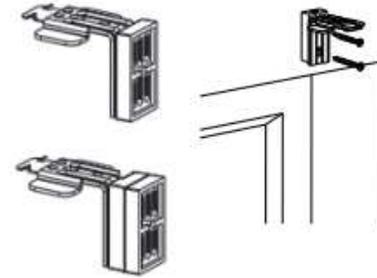


⚠ Note: If more spacer block is required, please install it as above picture.



4. To mount the shade

Shade Installation is the same for both inside and outside mount applications

Step 1: Align the female bracket on the shade to the male bracket.

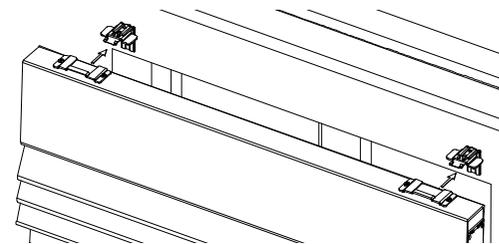


Step 2: Slide the female bracket on the shade into the male bracket until it snaps into place. **If more than two brackets are used, it is recommended to attach the center female bracket into the male bracket first, and then attach the female bracket at each end.**

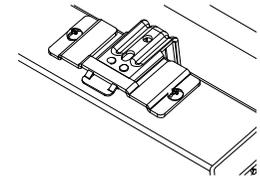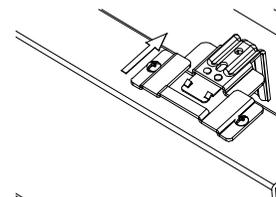


Step 3: If the female brackets are a little off from the male bracket, the position of the female brackets can be adjusted by moving left or right 5/16".

Note: To make the installation easily, please do the best to eliminate the deviation of the placement of bracket, to make sure the male bracket is in the middle of the female bracket.

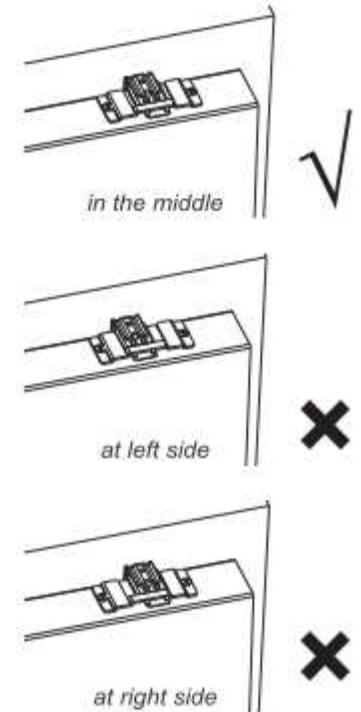

5. To mount the tension device


Measure and mark the location where the tension device will be mounted. Mount the tension device with 2 pcs 1 7/8" screw. The mounting screws must be secured into a solid surface or molly. When positioning and mounting the tension device, make sure the chain is taut without stretching, twisting or crossing, and the tension device and control chain does not interfere with raising or lowering the shade.

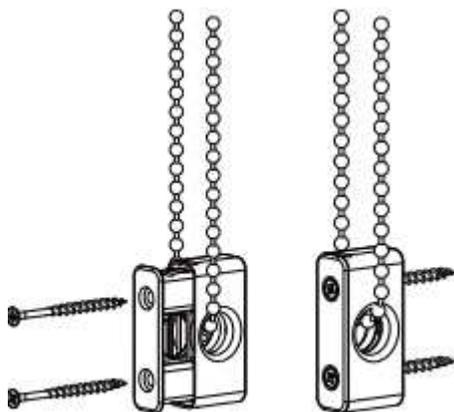

6. To operate the shade



Pull the back cord, the shade will raise.

Pull the front cord once, the shade will lower automatically.

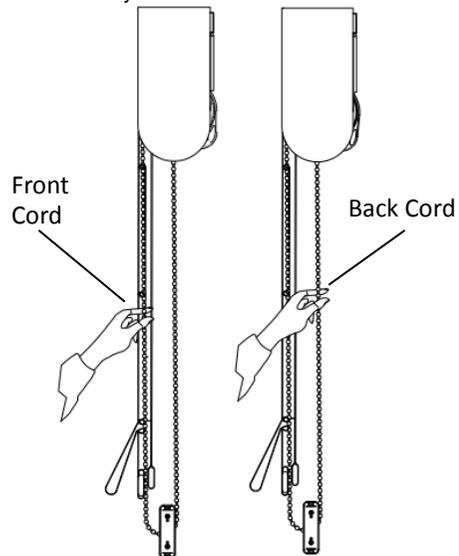

7. To remove the shade

Step 1: Insert the screwdriver into the space between the female and male bracket. Separate male bracket apart from the female bracket by revolving the screwdriver as pictured below. **If more than two brackets are used, it is recommended to separate the bracket at each end first, and then separate the one in the center.**

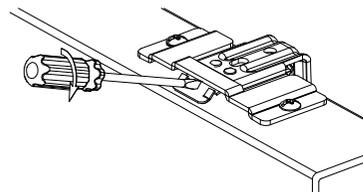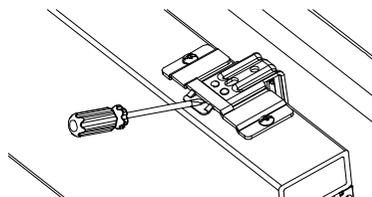

Step 3: Gently pull the shade outward to remove the shade.

