


Installation Instructions

Motorized

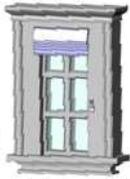

Getting Started

- Please take a moment to review the following installation guide.
- Please leave shade in folded open position for ease of installation
- Be sure to keep all components and packaging until shade is fully installed

Recommended Tools-----

- Power drill and Drill bit
- Tape Measure
- Screwdriver
- Level
- Pencil




You will need to use the following fasteners for your particular mounting surface.

Installation Screws-----

Surface	Fastener
Wood	1 1/2" Screw (Provided) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 


Hardware Included-----

Name	Picture
Outside Mount Male Bracket	
Inside Mount Male Bracket	
1 1/2" Screw	
2 1/2" Screw (when use spacer block)	
Spacer Block	

1. To mark the brackets

Step 1: Position the shade inside or outside (depending on the version) the window opening. Make a mark along the end of the headrail on both sides on the mounting surfaces.

Step 2: Mark the positions where you will install the brackets, 3.5" in from each side of the shade.

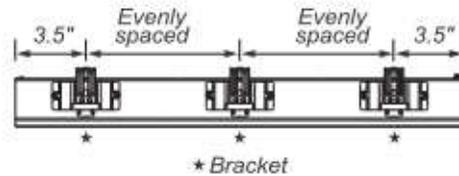


**** Proper alignment of brackets will make installation easier.**




2. To mount the shade inside a window frame

- When flush inside mount, allocate a min. distance of 1 3/8" from the edge of the wall to the center of the screw hole. Use one 1 1/2" Screw to secure brackets.

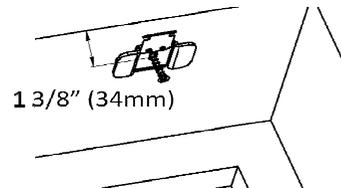

3. To mount the shade outside a window frame


Allocate a minimum distance of 2" from the end of brackets to the top window frame. Fix the bracket with two 1 1/2" screws.

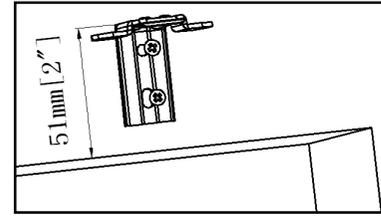

Note: If spacer block is required for outside mount, please follow the following guide:

Please always make sure the raised side of the spacer block is against the bracket.


If 2pcs spacer blocks are required, please follow the below illustration to attach the spacer blocks. Mount the combination of the bracket and spacer block with two 2 1/2" screws

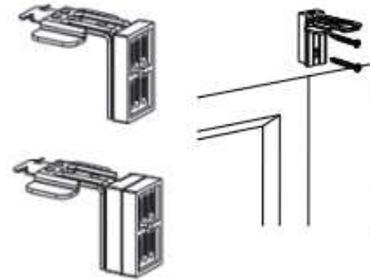

4. To mount the shade


Shade Installation is the same for both inside and outside mount applications

Step 1: Align the female bracket preinstalled on the shade to the male bracket.

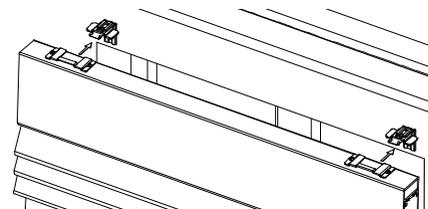


Step 2: Slide the female bracket on the shade into

the male bracket until it snaps into place. **If more than two brackets are used, it is recommended to attach the center female bracket into the male bracket first, and then attach the female bracket at each end.**

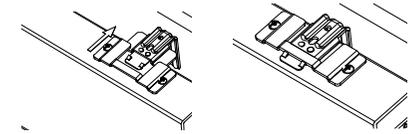

Step 3: If the female brackets are a little off from the male bracket, the position of the female brackets can be adjusted by moving left or right 5/16".


Note: To make the installation easily, please do the best to eliminate the deviation of the placement of bracket, to make sure the male bracket is in the middle of the female bracket.

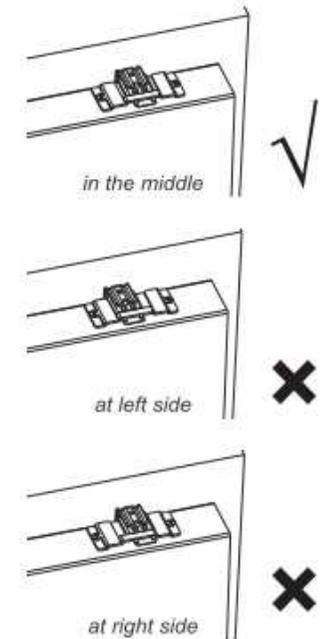

5. To install remote control holder

Fix the remote control holder with two 15mm screws and the distance between screws is 3 1/4" and screws protrude 1/8".

Attach the remote control holder to the screw.

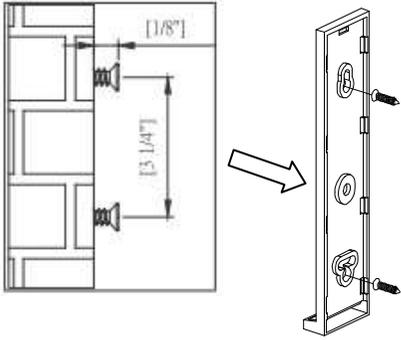

6. To operate the shade


Connect the plug to the AC power Jack.

Install remote battery and make sure the screen shows the right channel for the shade, and then the shade can be operable. The remotes are pre-programmed and ready to use. Please refer to the remote instructions for adjustment.

Note: Channel 1 is the default shown on the remote screen and channel 0 controls all shades programmed in one remote.

7. To remove the shade

Step 1: Insert the screwdriver into the space between the female and male bracket. Separate male bracket apart from the female bracket by revolving the screwdriver as pictured below. **If more than two brackets are used, it is recommended to separate the bracket at each end first, and then separate the one in the center.**

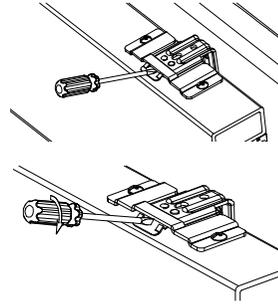

Step 3: Gently pull the shade outward to remove the shade.

