

Installation Instructions Cordless



Getting Started

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Recommended Tools


- Measuring Tape
- Pencil
- Level
- Screwdriver
- Power drill (1/4" hex driver and drill bit)



You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	#8 x 1 1/4" Screws (Provided) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 

Check Component / Hardware:

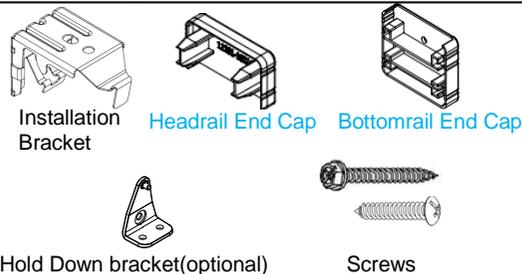


Hardware Standard Quantity

Order Width (X)	X < 27"	27" ≤ X ≤ 60"	X > 60"
Installation Bracket	2	3	4
1 1/4" Screw	4	6	8
2" Screw for Installation Bracket with spacer	4	6	8
3/4" Screw for Hold Down Bracket	Hold Down Bracket qty*2		
Hold Down Bracket (Optional)	2	2	2
Spacer (Optional)	2	3	4

Step 1: Bracket Installation

. Use a level to ensure all brackets are in alignment. Proper alignment of brackets will make installation easier.

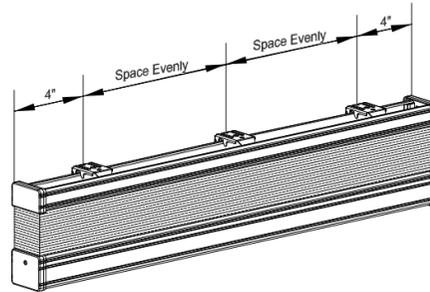


. Measure 4" from both ends of the headrail and mark the bracket location on the mounting surface (applies to both inside and outside mount installation).

Inside Mount

For shade to operate properly when inside mounted, check to make sure there is enough depth clearance for the installation bracket and no obstructions.


If you would like your shade to be flush with the wall, the distance from the wall to center of 1st screw hole needs to be 7/8".

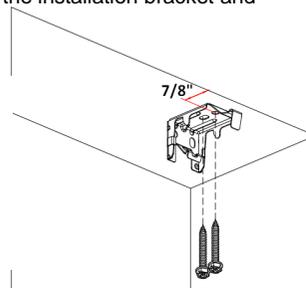

Outside Mount


The bottom of the installation bracket can be flush with top edge of window opening or higher.

Make sure all brackets are at the same level.

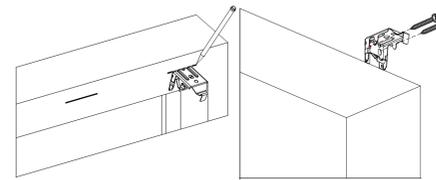


Step 2: Install and Remove the Shade


Insert the headrail with an angle and hook the front of the headrail to the bracket. Rotate and push the headrail upward, then release after snapping into place. See steps 1-2.

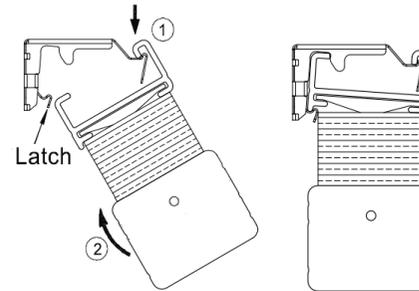

Fully raise the shade if you want to remove. Remove the shade by pushing the latch back. Release the shade by rotating the headrail towards you and lifting upward to unhook the rail from the bracket. See steps 1-4.

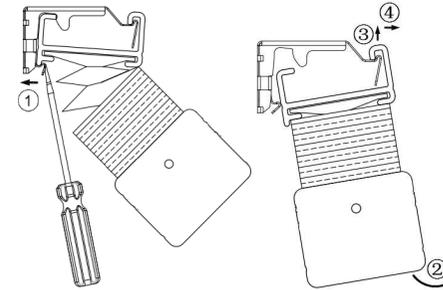

*Note: After pushed the latch back, try to take down the shade vertically.

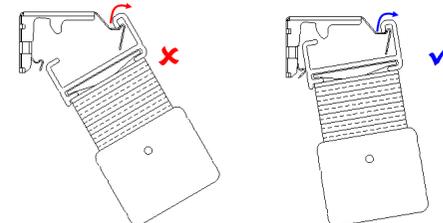


Step 3: Install Hold Down Bracket

Use two 3/4" screws to secure each hold down bracket.



Operate the Shade

To lower the shade, gradually pull down on the bottom rail.

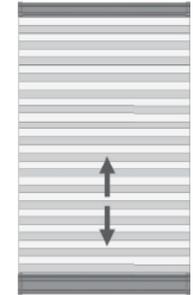

To raise the shade, gradually lift up on the bottom rail.

Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a duster, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the headrail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).

