


Step 5 – Add the Finishing Touch

IMPORTANT: Check shutter operation and alignment before installing frame inserts, as frame inserts can NOT be removed once they are snapped into place.

Match each frame insert with the corresponding side of the frame: Left to Left, Top to Top, Right to Right, Bottom to Bottom. Snap the frame inserts into place. This will cover screws and provide a finished look.

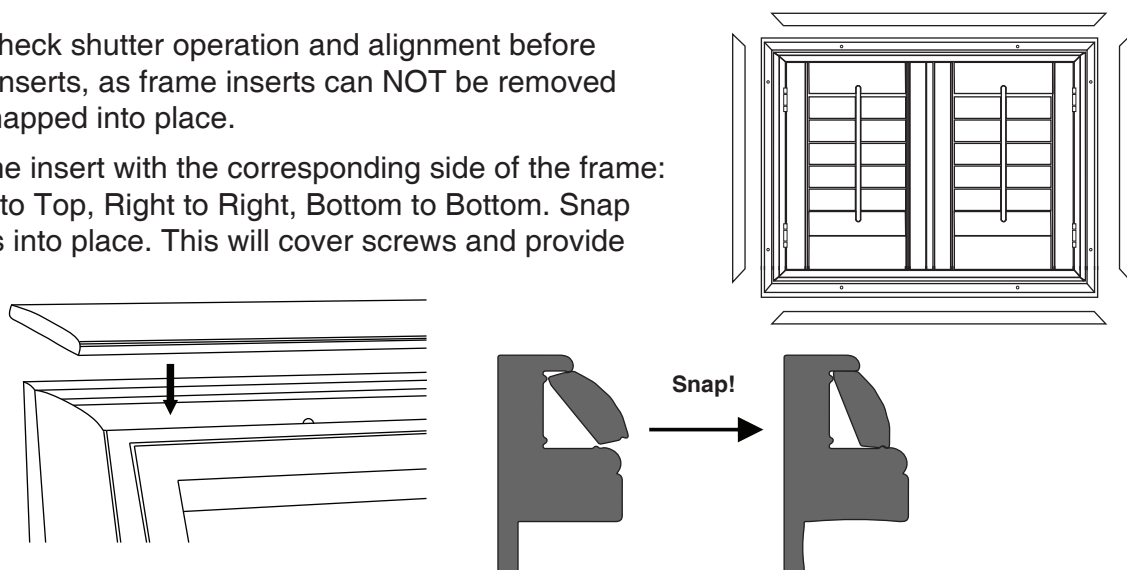


Maintain Your Shutters

Veneta™ shutters are made to resist most staining substances and can be easily cleaned by simply wiping down or dusting. For any stains or marks, a soapy water solution may be used along with a damp cloth. Open the louvers and panels, and wipe down the front and back of the shutters. You may also remove the panels from the frame and take down to clean.

Adjust the Tension System

If over a period of time the louvers on your shutters should loosen or not function properly, a built-in tension system can be adjusted. Simply open the panels fully and find the tension adjuster screw hole on the side of each panel. Use a screwdriver to gently turn the screw on each side of the panel to your desired resistance level. Repeat process for other panel(s) if necessary.

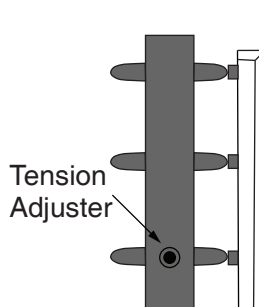

Lifetime Limited Warranty

All Veneta™ shutters have a lifetime limited warranty and will be free from defects in materials or workmanship for as long as the original retail purchaser owns the shutters, provided that such products were properly installed in residential dwelling; and such products were made or assembled exclusively from original materials and components. Any resale or other transfer of the product and/or materials voids this warranty.

For a complete copy of this warranty, please visit www.venetawindowfashions.com, or contact customer service by email or phone.

Customer Service

1-855-558-1222

Email: help@venetawindowfashions.com

Website: www.venetawindowfashions.com

VENETA™

FastFrame™ Shutter Installation Instructions 4 Sided Deco Frame

CONGRATULATIONS on purchasing the finest shutters in the market. You can take pride that your purchase will enhance the function and beauty of your home.

Installation Overview

Getting Started

Step 1: Take the Shutter out of the Package

Step 2: Level the Frame

Step 3: Secure the Frame


Step 4: Attach the Panels

Step 5: Add the Finishing Touch



Installation Video

Scan the QR code with your smartphone to follow along with video instructions.

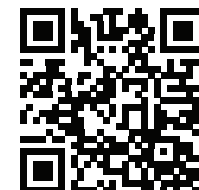

IMPORTANT: Do not mix panels or frames from other windows. Install one shutter at a time.

Tools needed for installing your shutter:



Drill



Pencil



Level




Screwdriver



Box Knife



Getting Started

Remove the shutter from the package. Do not discard any of the packaging material until the shutter operates to your satisfaction. Check the diagram below to make sure you have the necessary parts.

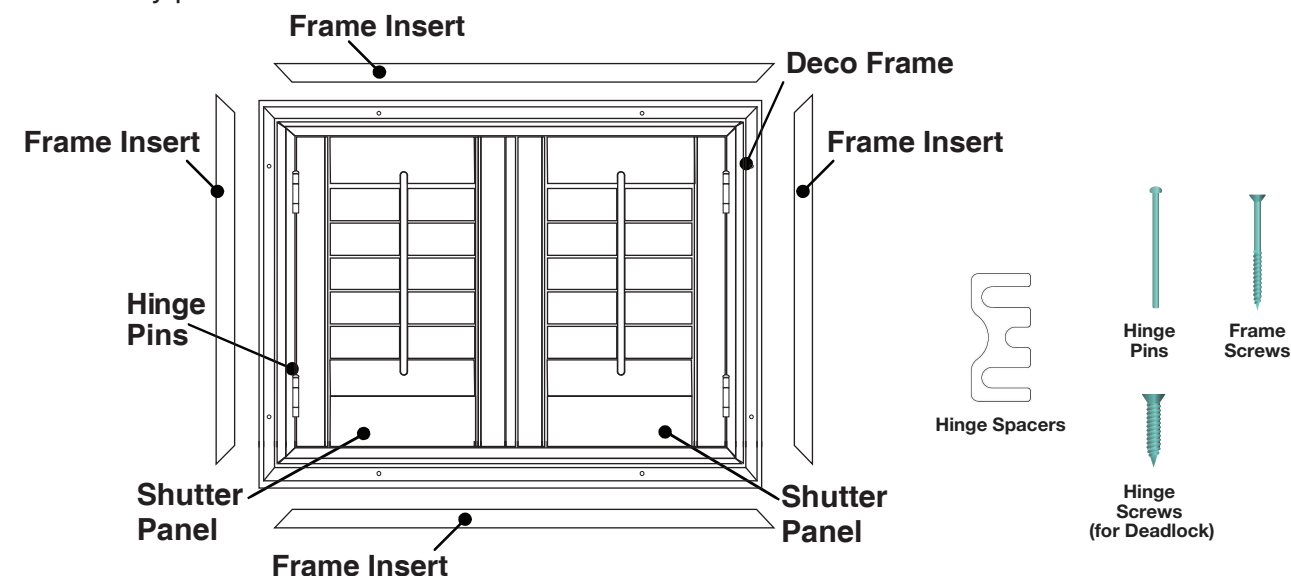

Step 1 – Take the Shutter out of the Package



- 1. Carefully remove panels and frames from the packaging. Do not mix panels or frames from other windows. Carefully remove the inserts from the frame.
- 2. Pull out all temporary hinge pins and carefully detach the panels from the pre-assembled frame.

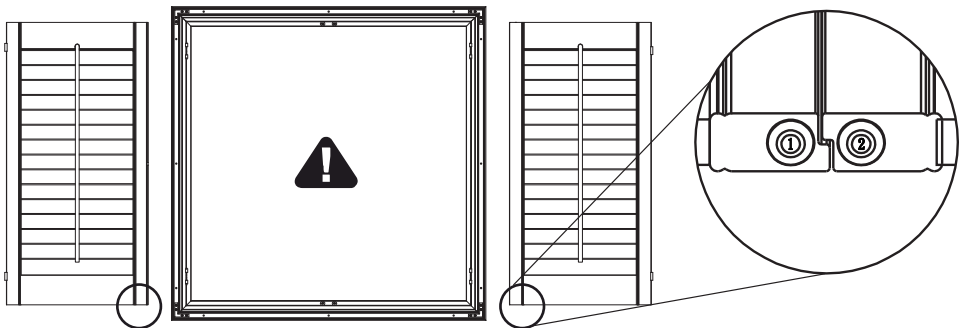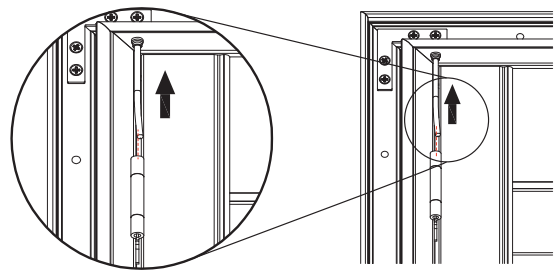

Panel may be marked as “P1” or “1”, “P2” or “2” to indicate the panel location. Ensure the bumpers are facing downward.



Step 2 – Level the Frame

Position the assembled frame evenly around the window opening against the window edges. Then secure one screw into the upper left frame ONLY. Once done, level the frame on the window.

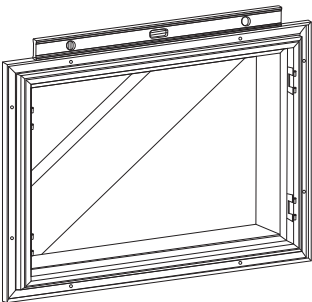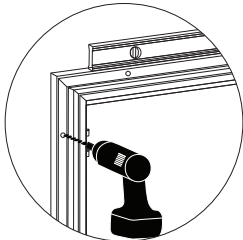


Step 3 – Secure the Frame

To keep the frame level, tighten one screw into the upper right frame. The shutters will be fully secured in later steps.

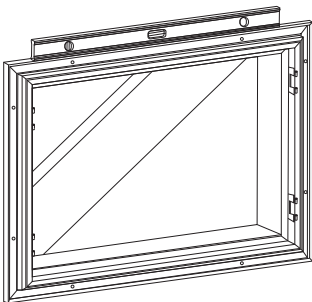
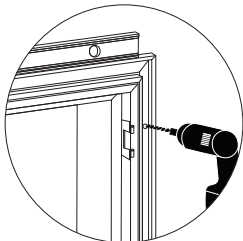


Step 4: Attach the Panels

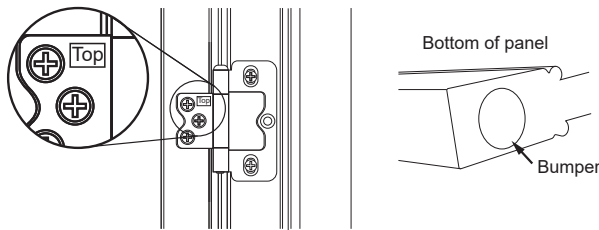


To ensure panels are installed correctly: Identify the top and bottom of the panel by locating the top label on the top hinge, and the bumper at the bottom of the panel.

- 1. Place the left shutter panel into the frame, align the hinges, and insert the hinge pin. Repeat for the right shutter panel. If you have bi-fold panels, after attaching the far left and/or far right panels to the frame, you will need to join the hinges of the panels labeled P1(1) and P2(2) and insert hinge pins. Repeat for panels labeled P3(3) and P4(4) if you have these. Proper order of panels from left to right is P1(1), P2(2), P3(3), P4(4).
- 2. If panel hinges are not aligned with frame hinges properly, then frame hinges can be adjusted.

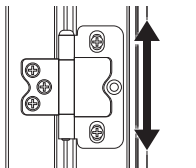
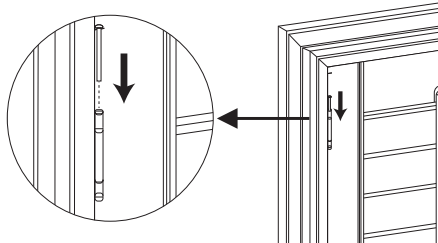


Loosen frame hinge screws, adjust frame hinges properly, tighten screws.



- 3. Please check the gap between panel and frame at the top and bottom. The gap should be even; if not, then shift frame left to right until the gap is even.

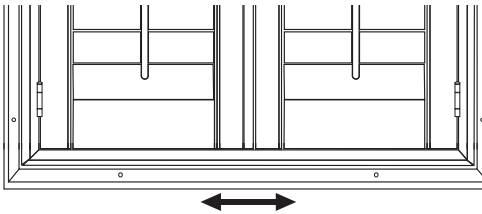


- 4. Once even, secure a screw at the bottom of the left frame and right frame.

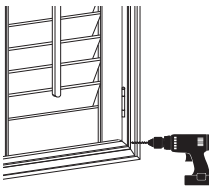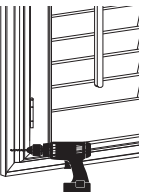

- 5. Check gap between panels and adjust accordingly with hinge spacers provided if needed.

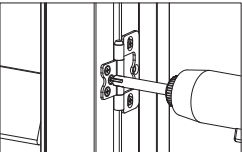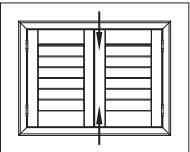

Loosen hinge screws on the panel

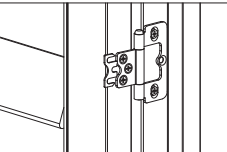


Insert spacer behind hinge, tighten screws



Spacer installed

- 6. Open and close the panels to make sure they operate properly. Then secure the frame by tightening the rest of the screws into the pre-drilled holes.

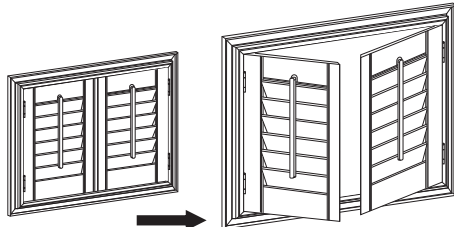

- 7. Fasten all the hinges by tightening the deadlock screw for each.

